

T500 RS – checking the gear paddles

The gear paddles of the T500 RS can feel/ sound differently (one from another).


This situation is normal and it does not point out any issues.

It is also possible to adjust or invert the springs under the 2 gear paddles (it's simple and it will not void the warranty):

1. Remove the wheel

<http://www.youtube.com/watch?v=l7cKX6F1ah0>


2. Remove these 6 screws shown below

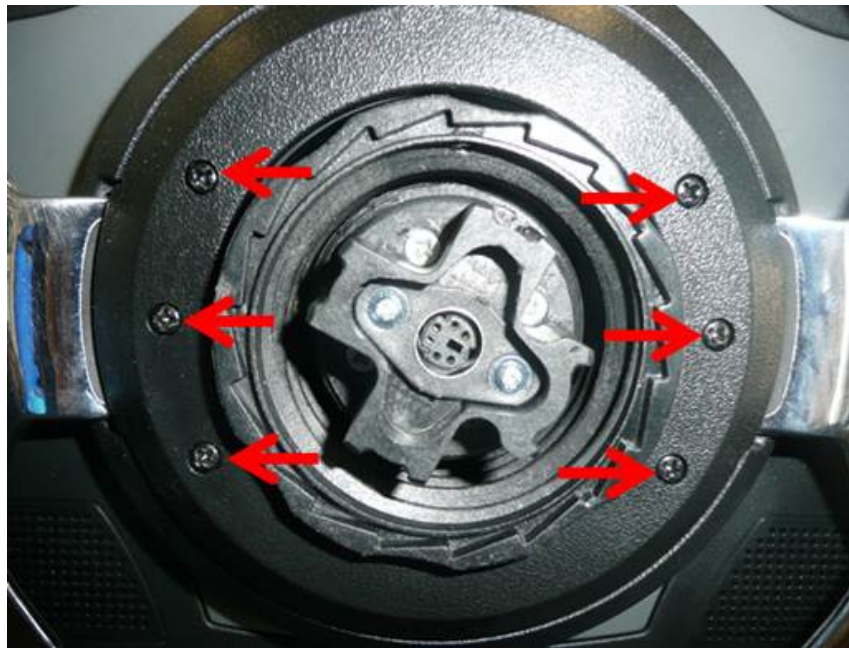

3. Remove the Plastic Ring




4. Remove these 4 screws shown below

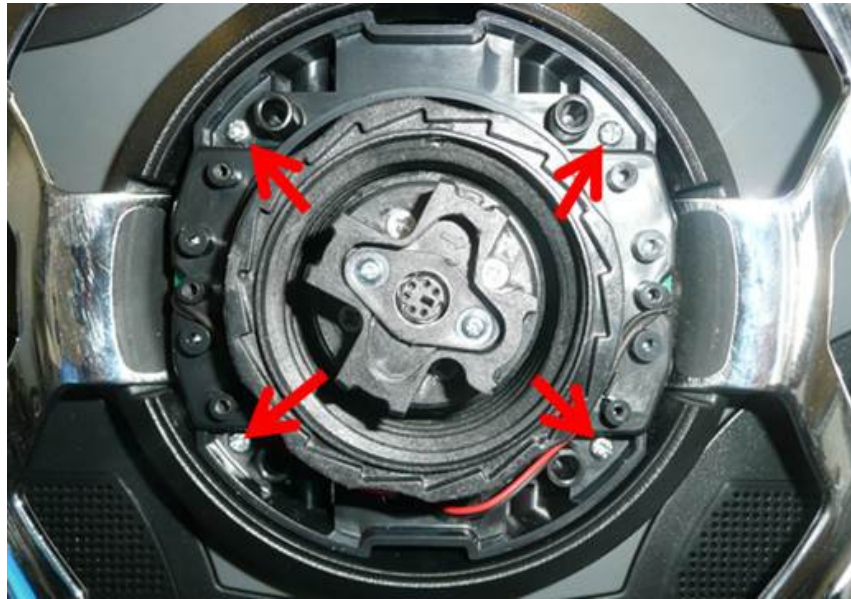

5. Remove the piece holding the gear paddles (be careful not to break the wires)



6. Remove these 2 screws shown below

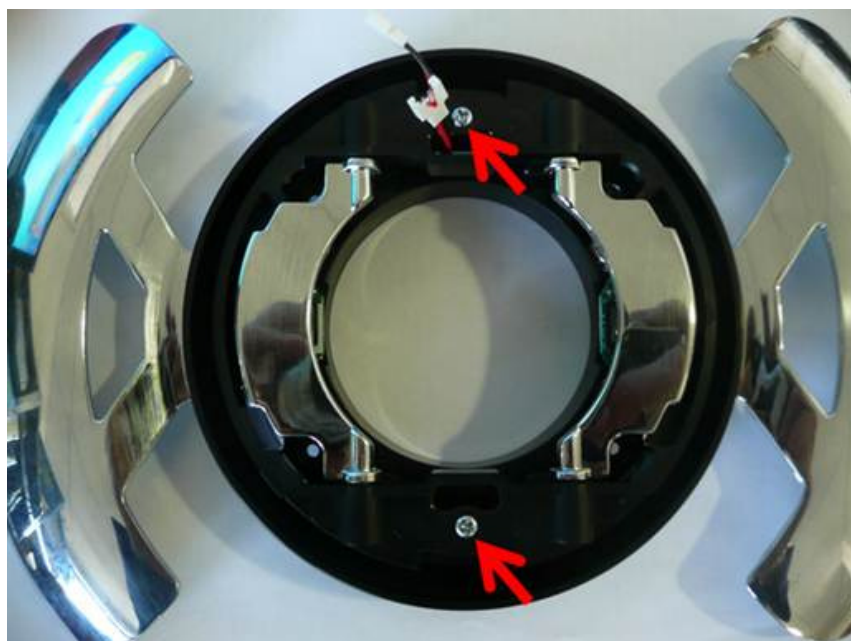

7. Now you can:

- Return completely the short Spring
- You can also replace all the springs on the left side with the ones on the right side and vice versa.

